# KINESYS

X/-100
Y/100

**Up Stage**
**Y**

X/100
Y/100

**Stage Right**

**Stage Left**

100

**X**

**Z**
**Up**
**Down**

**X**

X/-100
Y/0

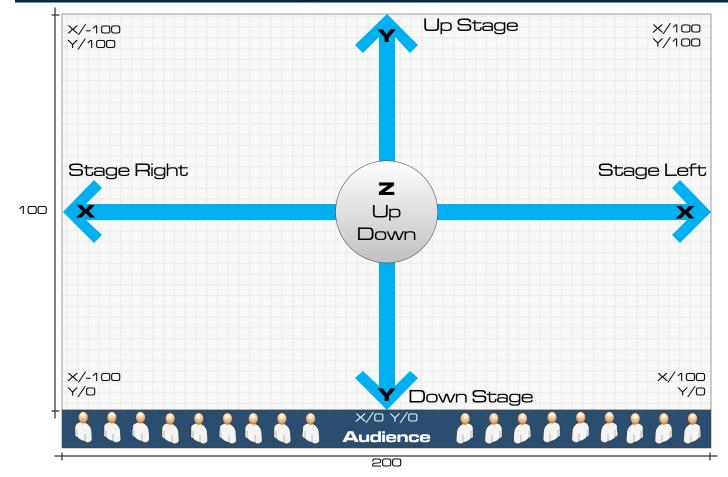**Y** **Down Stage**

X/100
Y/0

X/0 Y/0
**Audience**

200

## Info

**X Axis – Across Stage**
**Y Axis – Up/Down Stage**
**Z Axis – Vertical Up/Down**

**Pitch** – Up/down stage movement rotating around the X axis.
**Tilt** - Across stage movement rotating around the Y axis.
**Rotate** – A rotation around the Z axis.

**The 0,0 (datum) point is usually taken from down stage centre.**

**Any points past down stage in the Y axis or stage right of center in the X axis will be negative.**

Pitch

**Around the X axis**
**(Up/Down Stage)**

Tilt

**Around the Y axis**
**(Across Stage)**

Rotate

**Around the Z axis**